Title: DEVICE SWITCH ACTUATION

Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

1/7


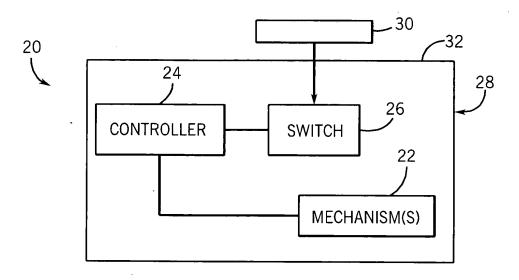



FIG. 1

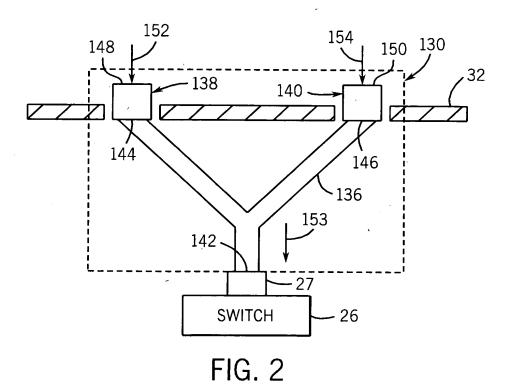

Title: DEVICE SWITCH ACTUATION

Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

2 / 7

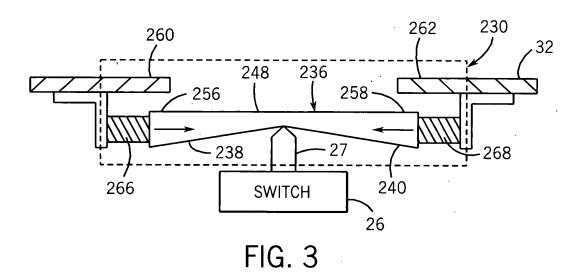


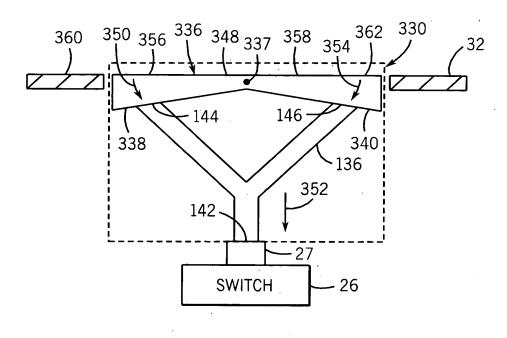



FIG. 4

Title: DEVICE SWITCH ACTUATION
Inventor(s): Richtsmeier et al.
DOCKET NO.: 200313857-1


3/7

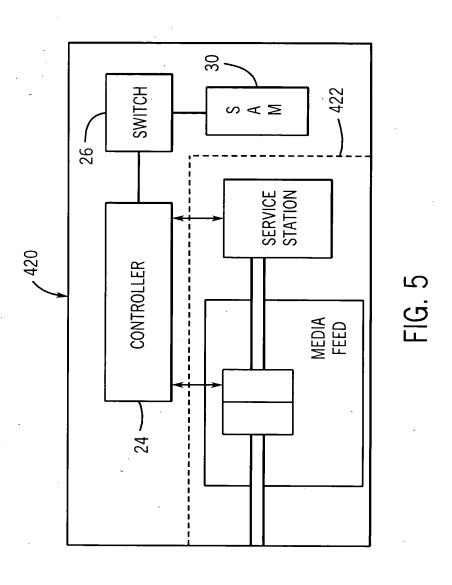

Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

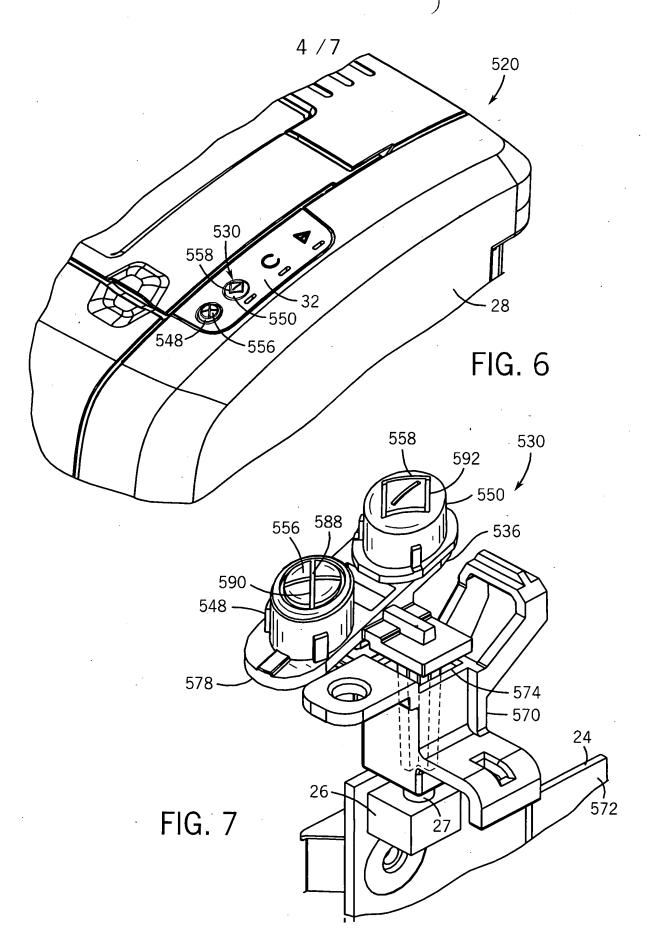


Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

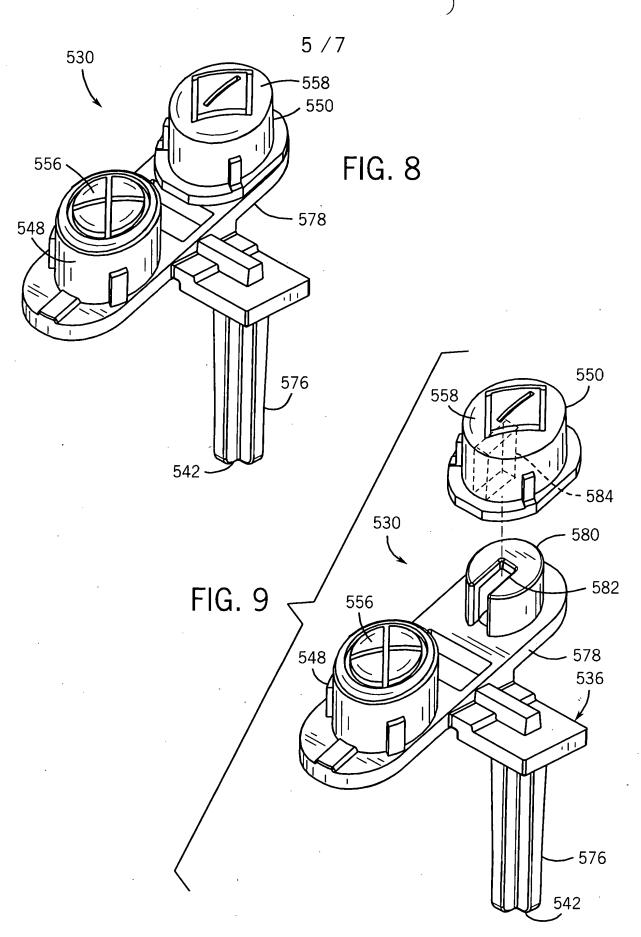

Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al.

DOCKET NO.: 200313857-1

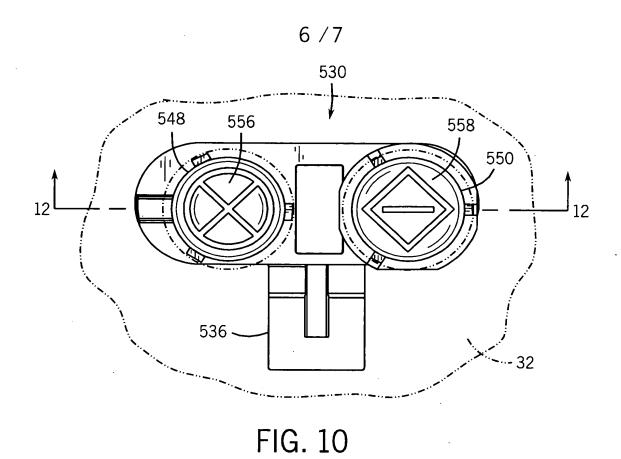

548 556 578 536 548 556 578 536 FIG. 11

Title: DEVICE SWITCH ACTUATION Inventor(s): Richtsmeier et al. DOCKET NO.: 200313857-1

